Brief User Manual FCUxxxx-IR

Status display

Infrared 2

Tasten Betriebsarten

Infrared 6

Power switch
Main switch „ON“ 8
Main switch „OFF“ 9
Cleaning light „ON“ 20

Only glas-keyboard
ON/OFF-key 8/9 G

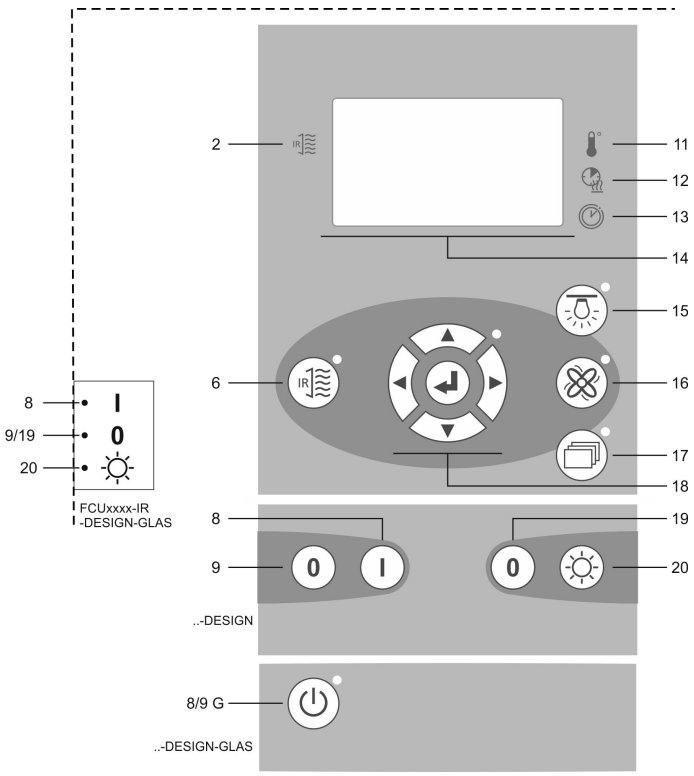

Menu display

11 Temperature
12 Heating duration
13 Timer

14 Display

Keys
15 Light

16 Fan

17 Menu
18 Navigation keys
Power switch
19 Cleaning light „OFF“
20 Cleaning light „ON“

Manuel start:

1. **Switch on:**
   Push main switch (8) and possibly key (8G) once

2. **Start mode:**
   Push key Infrared (6) once.
   The light in the key flashes

Automatic Timer-start:

1. Switch on (see point 1 on the left)
2. Push key ▼ or ▲ until symbol Timer (13) lights
3. Select with key ↵
4. Enter desired start time with keys ◄►▼▲
5. Confirm with key ↵
6. Push key Infrared (6) once
7. The symbol Timer (13) and the light in key (6) flash

Change the values set

1. Push key ▼ or ▲ until one of the symbols Temperature (11), Heating time (12) or Timer (13) lights
2. Select with key ↵
3. Enter desired value with keys ◄►▼▲
4. Confirm with key ↵